



click here to watch.

## Serial Marking

- 1) While being connected to the MB3 controller, click and draw in the marking area.
- 2) After creating the text field, select "Text" icon.
- 3) On the text screen, click the "Serial" icon and select from "Serial 1" to "Serial 4".
- 4) Edit each item in the screen below and confirm by clicking the "OK" button.
- 5) Once confirmed, a symbol will appear in the text field. @S[N] is the symbol. \*N indicates the serial number from 1 to 4.

Serial Number
✕

Current number

1

Update

Settings

Start	End	Style	Repeat	Skip	Reset
1	999	001 ▾	1 ▾	1 ▾	MAX ▾

OK

Current number		
	e.g.1	Showing the current number. And enter the start number. e.g.1 Click the "Update" button after resetting the number.
Settings		
Start	e.g. 1	Enter the minimum number after resetting the number.
End	e.g. 999	Enter the maximum number up to 8 digits.
Style	001	Mark with 0 such as 001,002,003.
	1...	Mark without 0 aligned to the left, such as 1, 2..., 3...
	...1	Mark without 0 aligned to the right, such as 1, ...2, ...3.
	A,B,C...	Mark counted alphabet characters such as A, B..., and Z.
Repeat		Set this value to make serial marking repetitively, e.g., 001, 001, 002, 002... The maximum number of repetitions that can be set is 20.
Skip		Set this value to make serial marking with skips, e.g., 001, 003, 005... The

		maximum number of skips that can be set is 10.
Reset	MAX	The number will be reset when the maximum number is reached.
	YEAR	The number will be reset when the year changes (on January 1st).
	MONTH	The number will be reset when the month changes (on the first day of each month).
	DAY	The number will be reset when the date changes (at 24:00 each day).
	TIME	The number will be reset at a specified time.
	SHIFT	The number will be reset at a specified shift.
	STOP	The marking will be stopped after the maximum number is reached. When it is stopped, an alarm will be displayed.

***Tip: How many serial numbers are set in a field and file.***

*Setting more than 2 serial numbers is not allowed in a single field. Create a different field to set more than 2 serial numbers. Up to 4 serial numbers are available in a file.*

## Contact

Please contact our distributor if you have an inquiry for operation and malfunction.

Manufacturer information:

Company : TOCHO MARKING SYSTEMS, Inc.

Address : 87-378 Yachimata-Ro, Yachimata, Chiba, Japan 289-1144

Tel : +81-43-308-4301

URL : <http://www.tokyo-chokoku.co.jp>