


How to install USB driver in Windows 7/8/10

Please follow steps the below and install manually when necessary.


Note : You need to download and install PM Win Software before install USB driver.

1. Open "Drive:C" → "Patmark" → "Patmark_USB" choose OS holder then choose "dpinst_XXX"
The part "XXX" is alternative depend on the computer select correct one referring the below images.



32 bit computer → dpinst_x86

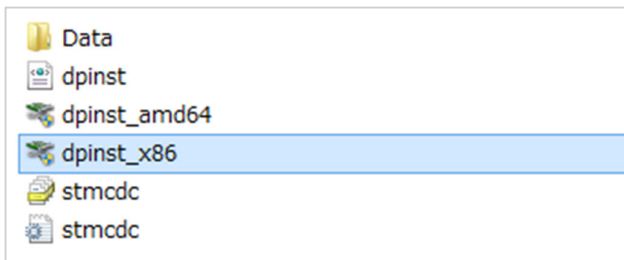

64 bit computer → dpinst_amd64

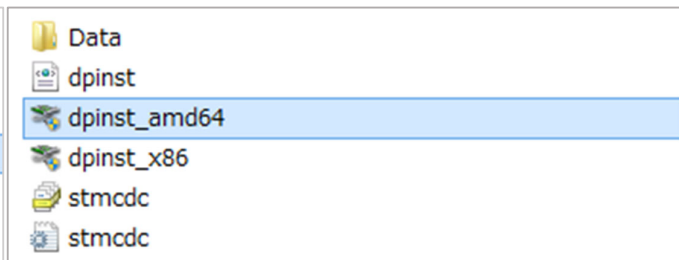

2. Click "Next" button the below then click "Finish" button to complete.

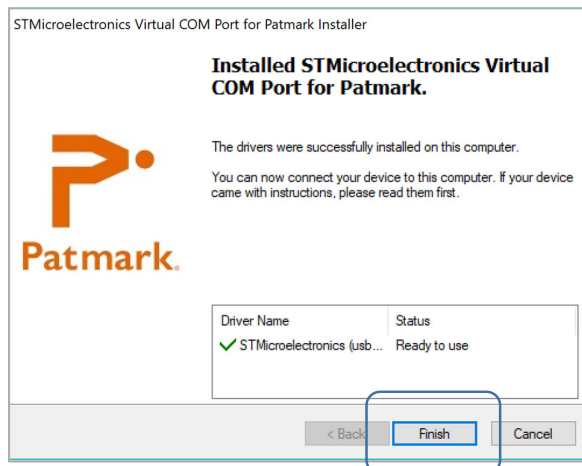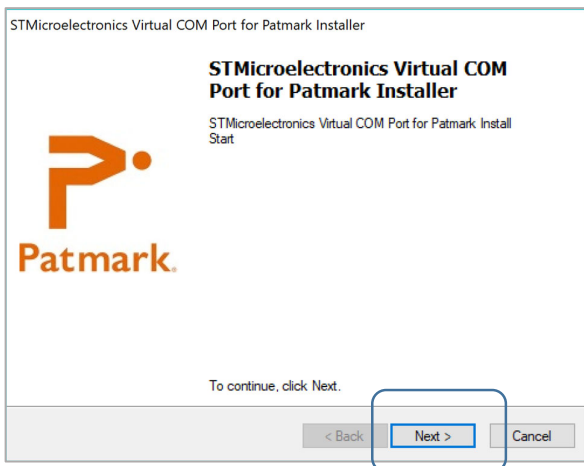

3. Connect the attached USB cable Patmark and computer then turn the power on Patmark.

4. After recognizing Patmark on the computer, open PM Win Software then click the USB icon to start.



Please ask our sales reps if you are not familiar.